



XB570L

CONTENTS

1. PLEASE READ BEFORE USING THIS MANUAL	2
2. SAFETY PRECAUTIONS	2
3. GENERAL FEATURES	2
4. MOUNTING & INSTALLATION	3
5. ELECTRICAL CONNECTIONS	3
6. CONNECTIONS	3
7. FRONTAL PANEL	3
8. QUICK START	4
9. HOW TO SELECT A CYCLE	8
10. PARAMETERS	8
11. HOW A CYCLE IS DONE	11
12. INSTALLATION AND MOUNTING	14
13. XB07PR - PRINTER (OPTIONAL)	15
14. ELECTRICAL CONNECTIONS	16
15. TTL SERIAL LINE	17
16. USE OF THE PROGRAMMING "HOT KEY "	17
17. ALARM SIGNALS	17
18. TECHNICAL DATA	18
19. STANDARD VALUE OF THE CYCLES	19
20. STANDARD VALUES OF THE PARAMETERS	19

1. PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.
- Dixell Srl reserves the right to change the composition of its products, even without notice, ensuring the same and unchanged functionality.

2. SAFETY PRECAUTIONS

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- Fit the probe where it is not accessible by the End User. The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.r.l." (see address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

3. GENERAL FEATURES

The series XB has been created for fast chilling or freezing goods according to international food safety standards.

There are FOUR types of cycles:

- The CYCLES: Cy1, Cy2, Cy3, Cy4 are pre-set according to the most common cycles used in food - safety applications; the user can select one of them according to his own requirements and modify it as he wants.
- Any cycle can be manually terminated before the normal.
- Any cycle can use the insert probes (up to 3), they measures the internal temperature of the product.
- During the Cycle there are no defrosts and the fans are always on, a defrost cycle can be done before any freezing cycle.
- The cycle is divided up to 3 phases completely configurable by the user.

- Each instrument is provided with an output for remote display XR REP, which shows the temperature of cabinets or goods.
- The XB570L controller is provided with internal real time clock and can be connected to the XB07PR printer. This means that a report, which includes all the main features of cycle, can be printed: start and end of the cycle, length of the cycle, logging of the temperature of the cabinet and goods.

4. MOUNTING & INSTALLATION

Model XB570L is a controller for panel mounting: the cut out dimensions are 150x31 mm and it has to be fixed with screws. The ambient operating temperature range is from 0.0 to 60°C. Avoid locations subject to heavy vibration, corrosive gases or excessive dirt. The same warnings have to be applied to the probes. Ensure enough ventilation around the instrument.

5. ELECTRICAL CONNECTIONS


The instruments are provided with a screw terminal block to connect cables with a cross section up to 2.5mm² for probes and digital input.

Spade on 6.3 mm heat-resistant wiring for supply and loads. Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the input connection cables from the power supply cables, from the outputs and the power connections. **Do not exceed the maximum current allowed on each relay**, in case of heavier loads, a suitable external relay has to be used.

5.1 PROBES CONNECTION

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature. Place the defrost termination probe among the evaporator fins in the coldest place, where most ice is formed, far from heaters and from the warmest place during defrost, to prevent premature defrost termination.

6. CONNECTIONS

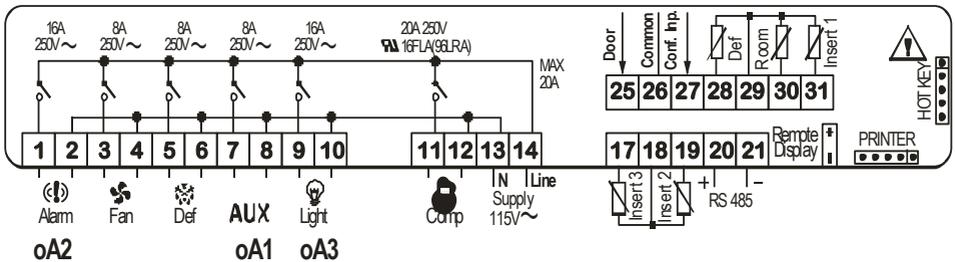

7. FRONTAL PANEL



8. QUICK START

8.1 DISPLAY

The **upper display** shows the temperature of the room probe.


The **lower display** shows the temperature of the inserts probe or the count down timer. To pass to the one insert probe to the another one use the DOWN key.

DISPLAY

- Temperature.
- Timer or insert probe
- Alarm and status icons.

If an icon or LED is on, the correspondent function is enabled.

If an icon or LED is flashing, the correspondent function is delayed.

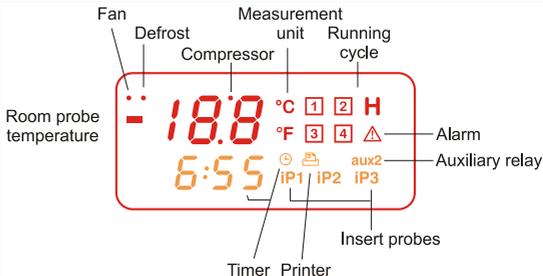

8.2 KEYBOARD IN STAND-BY

HOW TO SELECT A CYCLE:


Push and release the **P** (3) key till the desired cycle is selected.



HOW TO START A CYCLE: Push and release the START/STOP  button (2). If the correspondent yellow LED is switched on..

HOW TO TEMPORARILY STOP THE RUNNING CYCLE.

1. Press and release the  key.
2. The compressor and the fan will be stopped for the PAU time (see parameters list) and the flashing message "Stb" will be displayed.
3. To restart the cycle press and release the  key, the cycle will restart from the some point at which it was interrupted.
4. In any case the cycle automatically restarts after the PAU time.

HOW TO STOP A CYCLE: hold pushed the START/STOP  button (2) till the yellow LED will be switched off.

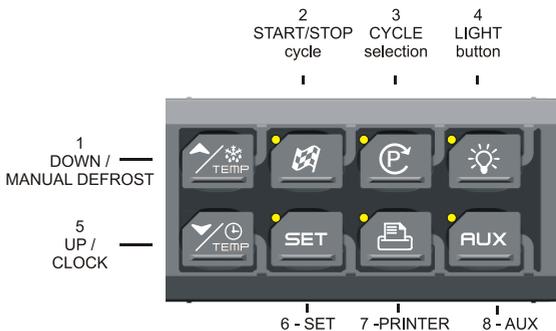
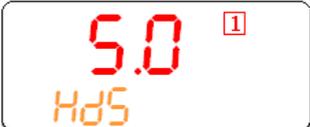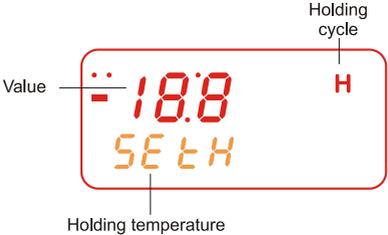
<p>HOW TO SET THE TIME (RTC) Hold pushed the DOWN key (5) till the Min label is displayed. Use the UP and DOWN KEY to browse the parameters.</p> <ul style="list-style-type: none"> - TO MODIFY: push the SET button and then the UP and DOWN keys. - TO CONFIRM: push the SET button. <p>TO EXIT THE RTC MENU: push both SET+UP keys or wait for 5 sec.</p>		<p>UP key: browse the menu:</p> <ul style="list-style-type: none"> - Min= minutes - Hou= hours - daY= day - Mon= month - YEA= year - tiM= US/EUROPE time
<p>HOW DISPLAY / MODIFY THE SET POINT OF THE HOLDING PHASE</p> <ul style="list-style-type: none"> - TO DISPLAY: push and release the SET key (6), the holding set point of the selected cycle is displayed for 5 sec. - TO MODIFY: while the set point is displayed hold pushed the SET key till the HdS label start flashing. Use the UP and DOWN key to modify the value.. <p>TO CONFIRM: push the SET key to confirm the value and exit.</p>		<p>In this example the holding set point of the cycle 1 is modified.</p>
		<p>In this example the set point of the holding cycle is modified.</p>
<p>HOW MODIFY A CYCLE:</p> <ol style="list-style-type: none"> 1. Push the P key (6) for several seconds till the first parameter (CyS) is displayed. 2. Use the UP and DOWN keys to browse the parameters. 3. To modify a parameter push the SET key and use the arrow keys. 4. Confirm the new value by pushing the SET key. 5. The new value is recorded even if the programming is exited by time out. 		

8.3 KEYBOARD WHEN A CYCLE 1,2,3,4 IS RUNNING

<p>DISPLAY TEMPERATURES: The upper display shows the temperature of the thermostat probe The bottom display shows the temperature of a insert probe (if enabled) or the count down timer. By pushing DOWN key, the probes iP1, iP2, iP3 and the count-down timer are displayed in sequence.</p>		
<p>PHASE DISPLAY: pushing the UP key the running phase is displayed.</p>		<p>PH1= phase 1 PH2= phase 2 PH3= phase 3</p>
<p>HOW TO DISPLAY THE REGULATION SET POINTS By pushing the SET key the following information are displayed in sequence: - rSi = Room set point - iSi = Stop phase set point, referred to the insert probe - Back to the room temperature.</p>		
<p>HOW TO MODIFY THE ROOM SET POINT While rSi or iSi are displayed hold pushed the SET key till the rSi or iSi label start flashing and LED near the SET key is turned on. Use the arrow key to modify the value and the SET key to confirm it.</p>		

8.4 KEYBOARD WHEN THE HOLDING CYCLE IS RUNNING (H)


<p>HOW TO DISPLAY THE HOLDING (REGULATION) SET POINT While the holding cycle is running, (H icon lighted), push the SET key and the holding set point is displayed on the UPPER display while the SETH label on the bottom display</p> <p>HOW TO MODIFY THE ROOM SET POINT While SETH is displayed hold pushed the SET key till the SETH label starts flashing and LED near the SET key is turned on.. Use the arrow key to modify the value and the SET key to confirm it. TO CONFIRM AND EXIT: push again the SET key</p>		
---	---	--

8.5 OTHER KEYS

LIGHT (4): push the LIGHT (4) key to switch the light on and off. The status of the light is monitored by the yellow LED upper the key.

AUX (8): push the AUX (8) key to switch the auxiliary on and off. The status of the auxiliary relay is monitored by the yellow LED upper the key.

PRINTER / H (7): push the PRINTER key when the keyboard is connected to the controller, to enable or disable the printer.

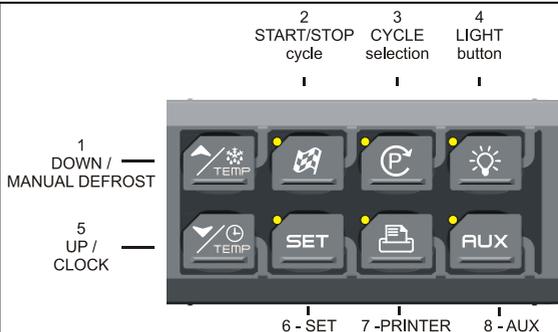


PRINTER CONFIGURATION MENU

Push the PRINTER (7) key for few seconds to enter the printer configuration menu.

The **itP**, label is displayed, use the ARROW keys to browse the parameters:

- **To modify:** push the SET key and then the ARROW keys.
- **To confirm:** push the SET key.

To exit the Printer menu: push both SET+UP keys or wait for 5 sec.

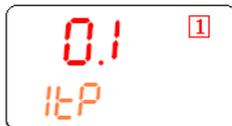

UP key: browse the menu:

- **itP**=time printing interval.
- **PbP**=data to print.
- **PAr**=enabled the printing of the parameter map.
- **CyC**=enabled the printing of cycle parameters.
- **PtH**=enabled the printing during the holding phase.
- **PrS**=level Pr1 o Pr2.
- **Pnu**=number of printing.

DOWN key back to the previous label.

8.6 HOW TO START A MANUAL DEFROST.

Assure that none cycle is active or the hold mode is running.

1. Keep **UP** key pressed a few seconds.

NOTE: the defrost will not be done if the temperature detected by the evaporator probe is higher than EdF (stop defrost temperature) parameter.

8.7 OTHER FUNCTIONS OF KEYBOARD

 + 	To lock & unlock the keyboard Pon/PoF
 + 	To enter the programming mode when the controller is in stand-by Each parameter present in the Pr2 can be removed or put into "Pr1" (user level) by pressing SET+DOWN .
 + 	To return to the previous menu.

8.8 MEANING OF THE LEDS

A series of light points on the front panels is used to monitor the loads controlled by the instrument. Each LED function is described in the following table.

LED	MODE	ACTION
	ON	Compressor enabled
	Flashing	Programming Phase (flashing with LED ) Anti-short cycle delay enabled
	ON	Fan enabled
	Flashing	Programming Phase (flashing with LED ) Activation delay active
	ON	Defrost active
	Flashing	Drip time active
1, 2, 3, 4, H	ON	Freezing cycle 1, 2, 3, 4 or hold mode active
1, 2, 3, 4, H	Flashing	Instrument temporarily stop
	ON	Alarm signalling
AUX, AUX2	ON	Aux or Aux2 enabled

9. HOW TO SELECT A CYCLE

- Push the  to move among the cycles C1, C2, C3, C4 and the holding cycle. The related symbol on the display will be lighted and the cycle will be selected.

NOTE: to pass from a cycle to another one simply push the  key when the controller is in stand –by mode.

HOLD PHASE: To select H symbol pushing the .

Cycles are pre-set with the following values:

1. Cy1: for fast chilling and conservation of foods (hard +soft chill).
2. Cy2: for chilling and fast freezing of foods (hard +soft + freezing cycle).
3. Cy3: for direct fast freezing (only fast freezing cycle)
4. Cy4: for fast freezing avoiding ice skin (hard chill + freezing cycle)
5. HLd: hold mode function
6. dEF: for starting a manual defrost

- Now the cycle is memorised and can be activated.

9.1 HOW TO MODIFY A CYCLE

- Verify that none cycle is running. If one cycle is running stop it by pushing the  key for 3 sec.
- Push the  to move among the cycles C1, C2, C3, C4 and the holding cycle. The related symbol on the display will be lighted and the cycle will be selected
- Hold push the  key for several seconds till the display will show the first parameter of the selected cycle (cyS) with its value.
- Use the UP and DOWN keys to browse the parameters.
- To modify a parameter push the SET key and use the arrow keys.
- Confirm the new value by pushing the SET key.
- The new value is recorded even if the programming is exited by time out.

To exit: wait for 30 sec or push both **SET+UP** kyes.

10. PARAMETERS

REGULATION

Hy Intervention differential for set point: (0.1 to 12.0 res. 0.1°C or 1°F) always positive. Compressor cut-IN is **SET+HY**. Compressor cut-OUT is when the temperature reaches the set point.

AC Anti-short cycle delay: (0 to 30 min) minimum interval between the compressor stop and the following restart.

PAU Time of stand by: (0 to 60 min) after this time the controller restart the cycle.

PfT Maximum acceptable duration of power failure: (0 to 250 min) if power failure duration is less than PfT, the cycle restarts from the same point at which it was stopped otherwise the cycle restarts from the beginning of the current phase.

Con Compressor ON time with faulty probe: (0 to 255 min) time during which the compressor is active in case of faulty thermostat probe. With **Con=0** compressor is always OFF.

CoF Compressor OFF time with faulty probe: (0 to 255 min) time during which the compressor is off in case of faulty thermostat probe. With **CoF=0** compressor is always active.

PROBES

rPOThermostat probe calibration: (-12.0 to 12.0, res. 0.1°C or 1°F).

EPP Evaporator probe presence (not present in the XB350C): (no / YES) **no:** not present (timed defrost); **YES:** present (end defrost).

EPO Evaporator probe calibration (not present in the XB350C): (-12.0 to 12.0, res. 0.1°C or 1°F).

i1P Insert probe 1 presence: (no / YES) **no:** not present; **YES:** present.

i1o Insert probe 1 calibration: (-12.0 to 12.0, res. 0.1°C or 1°F).

i2P Insert probe 2 presence: (no / YES) **no:** not present; **YES:** present.

i2o Insert probe 2 calibration: (-12.0 to 12.0, res. 0.1°C or 1°F).

i3P Insert probe 3 presence: (no / YES) **no:** not present; **YES:** present.

i3o Insert probe 3 calibration: (-12.0 to 12.0, res. 0.1°C or 1°F).

REM End cycle probe selection: (iPt; rPt) it sets which probe stops the cycle, thermostat probe or insert probe:

iPt=insert probe;

rPt=thermostat probe.

NOTE: with REM = rPt when the cycles are done by temperature, the rSi values are used as stop of the cycle.

DISPLAY AND MEASUREMENT UNIT

CF Temperature measurement unit: °C=Celsius; °F=Fahrenheit.

rES Resolution (for °C): **in**=integer; **de**=with decimal point.

Lod Upper display visualization: select which probe is shown by the upper display:

rP=Thermostat probe

EP=Evaporator probe

rEd Remote display, X-REP, visualization: select which probe is displayed by the X-REP:

rP=Thermostat probe; **EP**=Evaporator probe; **tim**=cycle count down; **i1P**=insert probe 1; **i2P**=insert probe 2; **i3P**=insert probe 3.

DIGITAL INPUTS

d1P Door switch input polarity (25-26): (OP; CL) select if the digital input is activated by opening or closing the contact. **OP**= opening; **CL**=closing.

odC Compressor and fan status when open door:

no=normal;

FAn=Fan OFF;

CPr=Compressor(s) OFF;

F_C=Compressor(s) and fan OFF.

doA Open door alarm delay: (0 to 254min, 255=nu) delay between the detection of the open door condition and its alarm signalling: the flashing message "dA" is displayed. If **doA=nu** the door alarm will be not signalled.

dLc Stop count down of the running cycle with door open: **Y**=count down is stopped with door opening; **n**=count down goes on with door open.

rrd Regulation restart with door open alarm: **Y**=count down and regulation restart when door open alarm is signalled; **n**=compressor and fans stay according to the **odC** parameter when door open alarm is signalled.

d2F Second digital input configuration (26-27): (EAL; bAL) **EAL**=external alarm; **bAL**=serious alarm, regulation is stopped.;

d2P: Configurable digital input polarity (26-27): (OP; CL) select if the digital input is activated by opening or closing the contact. **OP**=opening; **CL**=closing.

did Time delay for digital input alarm: (0 to 255 min) if **d2F=EAL** or **bAL** (external alarms), **did** parameter defines the time delay between the detection and the successive signalling of the alarm.

AUXILIARY RELAY CONFIGURATION

oA1 First auxiliary relay configuration (7-8):

ALL=alarm; **Lig**=light; **AuS**=second thermostat; **tMr**=auxiliary relay enabled by keyboard;
C2=second compressor: it is always switched on during the Cycles while depends on the 2CH parameter during the holding phase.

oA2 First auxiliary relay configuration (1-2):

ALL=alarm; **Lig**=light; **AuS**=second thermostat; **tMr**=auxiliary relay enabled by keyboard;
C2=second compressor it is always switched on during the Cycles while depends on the 2CH parameter during the holding phase.

oA3 First auxiliary relay configuration (9-10)

ALL=alarm; **Lig**=light; **AuS**=second thermostat; **tMr**=auxiliary relay enabled by keyboard;
C2=second compressor: it is always switched on during the Cycles while depends on the 2CH parameter during the holding phase.

SECOND RELAY MANAGEMENT

2CH Compressors setting during the holding phase (used only if one OAI =C2):

The second compressor is always switched on during the phases, during the holding depends on this parameter.

The **2CH** sets which compressor is used during the holding phase.

Second compressor operates on **SET+OAS**. (SET is the value loaded during the holding phase of each cycle). It starts oAt min after the first compressor.

The following table shows how it works:

	Holding
2CH =C1	C1 on
2CH =C2	C2 on
2CH =1C2	C1 on; C2 On

OAt Second compressor switching on delay: (0 to 255 min) time delay between the switching on of the first and second compressor.

OAS Set point for second compressor (-50 to 50, res.1°C or 1°F) this set point is a differential add to the set point of the first compressor.

ES:

OAS=0 the set point of the second compressor s the same set point of the first compressor.

OAS=5 the set point of the second compressor is SET (of first compressor) + 5;

OAS=-5 the set point of the second compressor is SET (of first compressor) – 5.

OAH Differential for second compressor: (-12.0 to 12.0, res.0.1°C or 1°F, always≠0) second compressor cut IN is SETH+OAS+OAH. Second compressor cut out is when the temperature SETH+OAS.

OAI Probe selection for the second compressor: **rP**=thermostat probe; **EP**=evaporator probe; **tiM**=cycle count down; **i1P**=insert probe 1; **i2P**=insert probe 2; **i3P**=insert probe 3.

AUXILIARY RELAY MANAGEMENT

OSt AUX output timer: (0 to 255 min) time in which the AUX output stays ON. It is used when **oA1** or **oA2** or **oA3=tMr**. With **oAt=0** the AUX relay is switched on and off only manually.

OSS Set point for AUX output, used when oA1 or oA2 or oA3=AUS: (-50 to 50, res.1°C or 1°F).

OSH Differential for AUX output: (-12.0 to 12.0, res. 0.1°C or 1°F, always≠0) intervention differential for the set point of the AUX output, with OAH<0 the action is for heating, with OAH>0 it is for cooling.

COOLING (OSH>0): AUX output cut IN is **OSS+OAH**. Second compressor cut out is when the temperature **SETH+OAS**.

HEATING (OSH<0): second compressor cut IN is **OSS-OAH**. Second compressor cut out is when the temperature **OSS**.

OSi Probe selection for the second compressor: **rP**=thermostat probe; **EP**=evaporator probe; **tiM**=cycle count down; **i1P**=insert probe 1; **i2P**=insert probe 2; **i3P**=insert probe 3.

DEFROST

tdF Defrost type (not present in the XB350C): **rE**=electrical heater; **in**=hot gas.

idf Interval between defrost cycles: (0.1 to 24h00min, res. 10 min) determines the time interval between the beginnings of two defrost cycles.

dtE Defrost termination temperature: (-50 to 50; res. 1°C or 1°F) sets the temperature measured by the evaporator probe, which terminates the defrost. Used only if **EPP=YES**.

MdF Maximum length for defrost: (0 to 255 min) when **EPP=no** (timed defrost) it sets the defrost duration, when **EPP=YES** (defrost termination based on temperature) it sets the maximum length for defrost. If **MdF=0** the defrost is disabled.

dFd Temperature displayed during defrost: (rt; it; SEt; dEF) **rt**=real temperature; **it**=temperature at the start of defrost; **SEt**=set point; **dEF**="dEF" message.

Fdt Drip time: (0 to 60 min) time intervals between reaching defrost termination temperature and the restoring of the controllers' normal operation. This time allows the evaporator to eliminate water drops that might have formed during defrost.

dAd Defrost display time out: (0 to 120 min) sets the maximum time between the end of defrost and the restarting of the real room temperature display.

FANS

Fn Fans operating mode during the holding phase:

o-n=continuous mode, OFF during defrost;

C1n=runs in parallel with the first compressor, OFF during defrost;

C2n=runs in parallel with the second compressor, OFF during defrost;

Cn=runs in parallel with compressors, OFF during defrost;

o-Y=continuous mode, on during defrost;

C1y=runs in parallel with the first compressor, on during defrost;

C2y=runs in parallel with the second compressor, on during defrost;

Cy=runs in parallel with compressors, on during defrost;

FSt Fan stop temperature: (-50 to 50, res. 1°C or 1°F) it is used only if the **EPP=YES**. If the temperature, detected by the evaporator probe is above **FSt** fans are stopped. It serves to avoid blowing warm air in the room.

AFH Differential for the stop temperature and for the alarm: (0.1 to 25.0°C, res. 0.1°C or 1°F) fans carry on working when the temperature reaches the **FSt-AFH** value, the temperature alarm recovers when the temperature is **AFH** degrees below the alarm set.

Fnd Fan delay after defrost: (0 to 255 min) the time intervals between ends of defrost and evaporator fans start.

TEMPERATURE ALARMS

ALU MAXIMUM temperature alarm (it is used only during the holding phase): (1.0 to 50.0, res. 0.1°C or 1°F) when the **SET+ALU** temperature is reached the alarm is enabled, (possibly after the **ALd** delay time).

ALL Minimum temperature alarm (it is used only during the holding phase): (1.0 to 50.0, res. 0.1°C or 1°F) when the **SET-ALL** temperature is reached the alarm is enabled, (possibly after the **ALd** delay time).

ALd Temperature alarm delay (it is used only during the holding phase): (0 to 255 min) time interval between the detection of an alarm condition and alarm signalling.

EdA Temperature alarm delay at the end of a defrost (it is used only during the holding phase): (0 to 255 min) time interval between the detection of the temperature alarm condition at the end of defrost and alarm signalling.

tbA Silencing alarm relay: **Y**=silencing buzzer and alarm relay; **n**=only buzzer silencing.

CYCLE LOG

tCy Duration of the last cycle (read only).

tP1 Duration of first phase of the last cycle (read only).

tP2 Duration of second phase of the last cycle (read only).

tP3 Duration of third phase of the last cycle (read only).

OTHER

Adr Address for RS485: 1 to 247.

bUt Buzzer activation at the end of the cycle: (0 to 60 sec; with 0 the buzzer is on till any key will be pushed).

tPb Kind of probe: it sets the kind of probe used. **ntC**=NTC, **PtC**=PTC.

rEL Release code (read only).

Ptb Parameter code (read only).

11. HOW A CYCLE IS DONE.

1. Every programmable cycle Cy1, Cy2, Cy3 or Cy4 can be divided into up to 3 phases usually called:

- **hard chill**
 - **soft chill**
 - **freezing cycle**
2. For each phase there are 3 parameters:
- iS1 (iS2, iS3):** set point related to the insert probes that stops the current phase.
- rS1 (rS2, rS3):** set point of the room temperature for each phase.
- Pd1 (Pd2, Pd3):** the maximum duration time for each phase.
- Hds:** set point of the hold phase at the end of the whole cycle.

There are also 3 parameters: **CYS** to decide the kind of cycle, by temperature or by time, and other two related to the defrost. These are **dbc** (defrost before cycle) and **dbH** (defrost before holding, at the end of the cycle).

11.1 CONFIGURABLE CYCLE PARAMETERS

CYS Cycle setting: tEP=by temperature. The cycle is done according to the rEM parameter. tiM=timed cycle, based on the Pd1, Pd2, Pd3 parameters.

dbc Defrost before the cycle: n; Y.

iS1 Insert Probe Set point: (-50 to 50, res. 1°C or 1°F) when the temperature measured by the three insert probes reaches this value the first phase is ended.

rS1 Room probe Set point for the first phase: (-50 to 50, res. 1°C or 1°F) it prevents temperature from reaching a too low value during the hard cycle.

Pd1 Maximum time for first phase: OFF to 4h00min, res. 10 min.

iS2 Insert probe set point: (-50 to 50, res. 1°C or 1°F) when the temperature measured by the three insert probes reaches this value the second phase is ended.

rS2 Room probe Set point: (-50 to 50, res. 1°C or 1°F) for the second phase: it prevents temperature from reaching a too low value during the second phase.

Pd2 Maximum time for second phase: OFF to 4h00min, res. 10 min.

iS3 Insert Probe Set point: (-50 to 50, res. 1°C or 1°F) to stop the third (and last) phase: when the temperature measured by the three insert probes reaches this value the third phase is ended.

rS3 Room probe Set point: (-50 to 50, res. 1°C or 1°F) for the third (and last) phase: it prevents temperature from reaching a too low value during the third (and last) phase.

Pd3 Maximum time for the third phase: OFF to 4h00min, res. 10 min.

dbH Defrost before the hold phase: n; Y.

HdS Set point of the holding phase: (-50 to 50, res. 1°C or 1°F) with "OFF" the hold phase is disabled.


IMPORTANT NOTE: If the duration time of a phase is set at the OFF value, the corresponding phase is disabled. For example, if **Pd3=OFF** the third phase of the cycle is not active.

11.2 HOW TO USE THE INSERT PROBES

By means the insert probe, the internal temperature of products can be checked. This measure is used to end the various phase of the cycle. A special internal function detect if the inset probe is not used, in this case the cycle is made by time.

11.3 EXAMPLE OF A BLAST CHILLER CYCLE

The following drawing explains how a Blast Chiller cycle can be done.

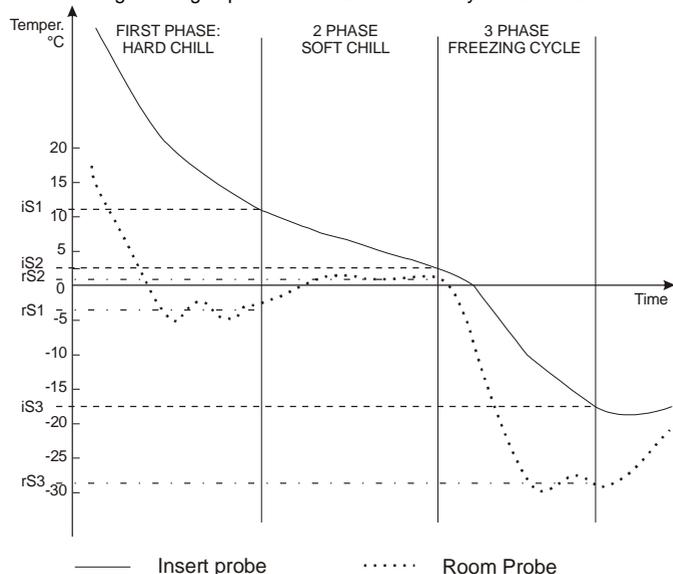

11.3.1 First phase: "Hard chill".

It is normally used to fast chill hot foods. E.g. from 80°C / 170°F to 20°C / 70°F

During "Hard Chill", both compressor and fan are always on until the rS1 temperature is reached. At this point compressor is turned on end off so as to keep the temperature of the room at the rS1 value. "Hard Chill" ends when the temperature measured by the 3 insert probes reach the iS1 value.

11.3.2 Second phase: "Soft chill".

The Soft Chill starts when the Hard Chill ends. It is used to prevent thin layer of ice from forming on the product. The Soft Chill lasts until the temperature measured by the 3 insert probes reach the set point iS2 (usually 4 or 5°C).

During Soft Chill the temperature of the room is regulated by the ambient probe with the set point rS2 (normally at 0 or 1 °C / 32 or 34°F). When the box temperature reaches the rS2 value compressor is turned on end off so as to keep the temperature of the box at this value.

11.3.3 Third phase: "Freezing cycle".

Freezing Cycle: used to fast freeze foods.

The Freezing Cycle starts when the Soft Chill ends. During the "Freezing Cycle" both compressor and fan are always on until the rS3 temperature is reached. At this point compressor and fans are turned on end off so as to keep the temperature of the room at the rS3 value (normally some degrees below iS3). Freezing Cycle ends when the temperature measured by the 3 insert probes reach the iS3 value (normally -18°C / 0°F), in any case it ends when the maximum time Pd1 + Pd2 + Pd3 has expired.

11.3.4 End of the Blast Chill cycle and starting of the Hold Mode.

When one of the three insert probes reaches the iS3 value the values End followed by the i1P or i2P or i3P are shown on the display.

Cycle ends when all the probes have reached the iS3 value. A signal is generated: buzzer and alarm relay is turned ON, the display shows the message "End" alternating with the room temperature.

The alarm automatically stops after the "but" time or by pressing any keys.

At the end of the cycle the controller can start the "Hold mode" keeping the room temperature at the value set in HdS parameter.

If HdS = OFF, the machine is turned OFF.


NOTE1: with dbH = yES a defrost is done before the holding phase.

NOTE2: If the end cycle temperature iS3 is not reached in the maximum time Pd1+Pd2+Pd3 the instrument keep on working, but the alarm message “OCF” is given.


12. INSTALLATION AND MOUNTING

Instruments **XB570L** shall be mounted on vertical panel, in a 150x31 mm hole, and fixed using two screws \varnothing 3 x 2mm. To obtain an IP65 protection grade use the front panel rubber gasket (mod. RG-L). The temperature range allowed for correct operation is 0 to 60°C. Avoid places subject to strong vibrations, corrosive gases, excessive dirt or humidity. The same recommendations apply to probes. Let the air circulate by the cooling holes.

12.1 CUT OUT

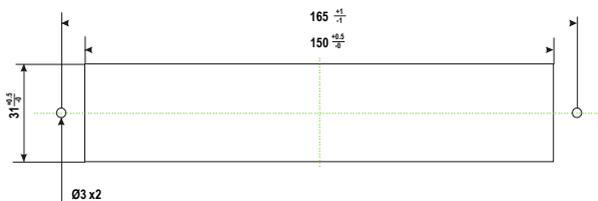


12.2 MOUNTING

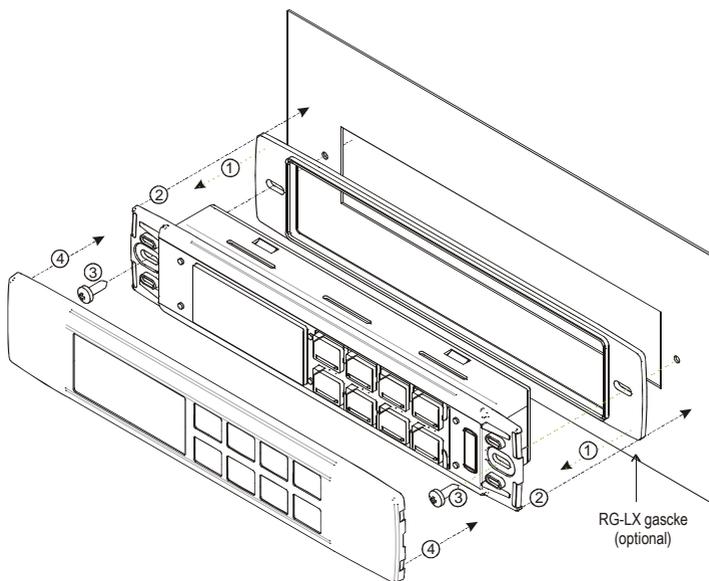


13. XB07PR - PRINTER (OPTIONAL)

The XB570L is designed to work with the XB07PR.
The XB07PR kit is composed by:


1. Printer
2. Power adapter
3. Connecting cables

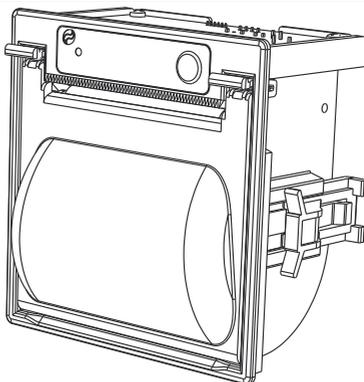


13.1 PRINTER DIMENSIONS

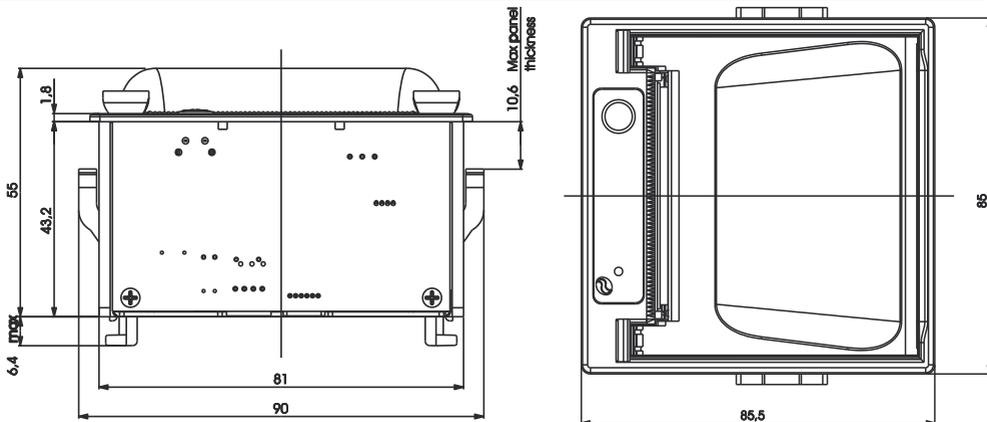

13.2 PRINTER MOUNTING

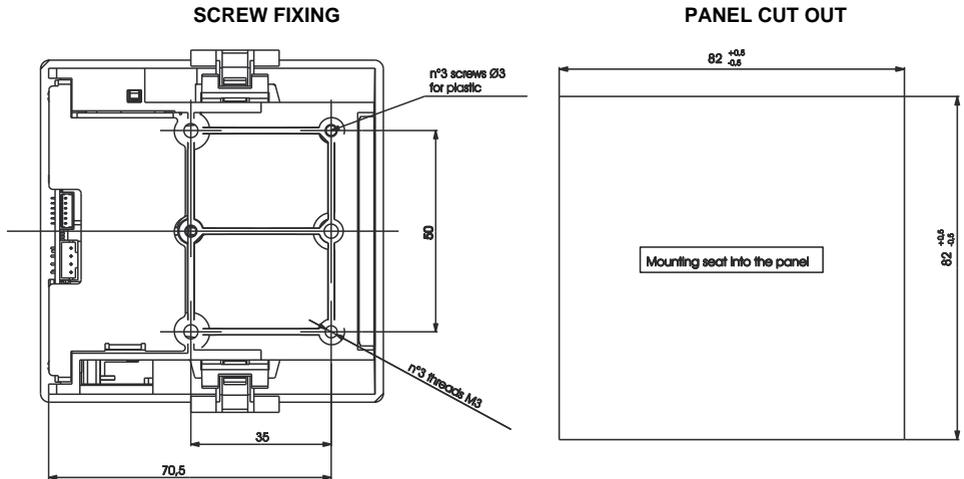

13.3 CONNECTION TO THE XB570L – XB07PR

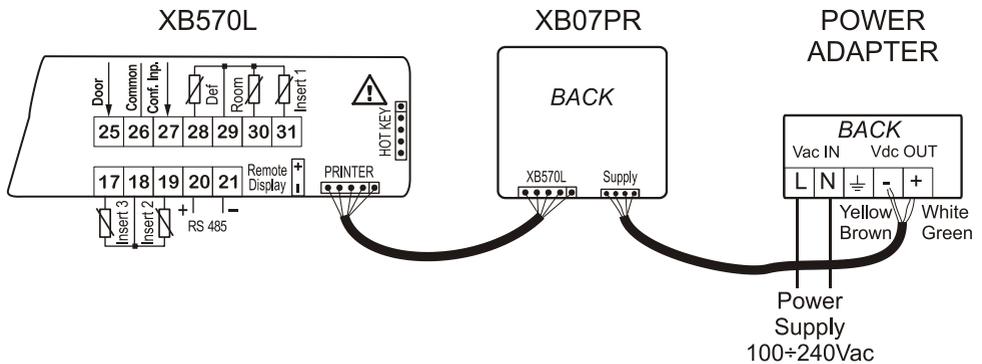

14. ELECTRICAL CONNECTIONS

The instruments are provided with screw terminal block to connect cables with a cross section up to 2.5mm² for the digital and analogue inputs. Relays and power supply have a Faston connection (6.3mm). Heat-resistant cables have to be used. Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the probe cables from the power supply cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay.

N.B. Maximum current allowed for all the loads is 20A.

14.1 PROBE CONNECTIONS

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature.

15. TTL SERIAL LINE

The TTL connector allows, by means of the external module TTL/RS485, to connect the unit to a network line **ModBUS-RTU** compatible as the Dixell monitoring system.

The same TTL connector is used to upload and download the parameter list of the “**HOT KEY**”.

16. USE OF THE PROGRAMMING “HOT KEY “

The Wing units can **UPLOAD** or **DOWNLOAD** the parameter list from its own E2 internal memory to the “**Hot Key**” and vice-versa.

16.1 DOWNLOAD (FROM THE “HOT KEY” TO THE INSTRUMENT)

1. Turn **OFF** the instrument by means of the ON/OFF key, remove the TTL serial cable if present, insert the “**Hot Key**” and then turn the Wing **ON**.
 2. Automatically the parameter list of the “**Hot Key**” is downloaded into the Wing memory, the “**DoL**” message is blinking. After 10 seconds the instrument will restart working with the new parameters.
 3. Turn **OFF** the instrument, remove the “**Hot Key**”, plug in the TTL serial cable and then turn it **ON** again.
- At the end of the data transfer phase the instrument displays the following messages:
- **End** for right programming. The instrument starts regularly with the new programming.
 - **Err** for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the “**Hot key**” to abort the operation.

16.2 UPLOAD (FROM THE INSTRUMENT TO THE “HOT KEY”)

1. Turn **OFF** the instrument by means of the ON/OFF key and remove the TTL serial cable if present; then turn it **ON** again.
 2. When the unit is **ON**, insert the “**Hot Key**” and push the **UP** key; the “**UPL**” message will appear.
 3. Push **SET** key to start the **UPLOAD**; the “**UPL**” message will start blinking.
 4. Turn **OFF** the instrument, remove the “**Hot Key**”, plug in the TTL serial cable and then turn it **ON** again.
- At the end of the data transfer phase the instrument displays the following messages:
- **End** for right programming. The instrument starts regularly with the new programming.
 - **Err** for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the “**Hot key**” to abort the operation.

17. ALARM SIGNALS

Mess.	Cause	Outputs
EE	Data or memory failure	Alarm output ON. Other outputs unchanged
rPF	Thermostat Probe failure	Alarm output ON. Compressor output according to parameters Con and CoF
EPF	Evaporator Probe failure	Alarm output ON. Defrost termination is timed. No temperature control on fans.
i1P i2P i3P	Insert probe 1, 2, 3, failure	Alarm output ON. Other outputs unchanged. The cycle is made by time
rtC	Real Time Clock data lost	Alarm output ON. Other outputs unchanged.
rtF	Real Time Clock failure	Alarm output ON. Other outputs unchanged. The date and the duration of the cycle are not available.
HA	Maximum temperature alarm	Alarm output ON. Other outputs unchanged.
LA	Minimum temperature alarm	Alarm output ON. Other outputs unchanged.
FF	Fast freezing interrupted by short power failure	Alarm output ON. The freezing cycle restart from the same point at which was interrupted.
PFA	Fast freezing interrupted by long power failure	Alarm output ON. The freezing cycle restart from the current phase.
OCF	Max duration of the cycle is expired	Alarm output ON. Other outputs unchanged. In any case the cycle ends when the final temperature is reached
EA	External alarm	Alarm output ON. Other outputs unchanged.
CA	Serious external alarm	Alarm output ON. Other outputs OFF.
dA	Door open alarm	Alarm output ON. Other outputs unchanged.

18. TECHNICAL DATA

Housing: self extinguishing PC/ABS

Dimensions: frontal 38x185 mm; depth 76 mm

Mounting: panel mounting device on a 150x31 mm hole, with 3 x 2mm screws, distance between holes of 165mm.

Degree of protection: **NEMA - UL 50e:** Indoor use only, type 1 enclosure

Rear housing: IP20; **Front panel:** IP65 (with front seal, mod. RG-L)

Power supply: 230Vac opp. 110Vac \pm 10%, 50/60Hz

Rated power: 9VA max

Display: three digits, red LEDs, height 14,2 mm

Software class: A

Terminal connections: screw terminal for conductors \leq 2,5 mm², resistant to heat for extra-low voltage component

Male Faston 6,3mm, resistant to heat for low-voltage component (110 0 230Vac)

Data storing: non-volatile memory (EEPROM)

Type of action: 1B

Pollution degree: 3

Ambient operating temperature: 0 to 60°C

Storage temperature: -25 to 60°C

Relative humidity: 20 to 85% (no condensing)

Measurement range:

NTC probe: -40 to 110°C (-40 to 230°F)

PTC probe: -50 to 150°C (-55 to 302°F)

Resolution: 0.1°C or 1°F

Accuracy of the controller at 25°C: \pm 0.5°C \pm 1 digit

Inputs: 5 PTC or NTC probes

Digital inputs: door and configurable, voltage-free contacts

Outputs on relay: total current on loads MAX 20A

compressor: relay SPST 20(8)A or 8(3) A, 250Vac

defrost: relay 8(3)A, 250Vac

fans: relay SPST 8(3)A, 250Vac

Light : relay SPST 16(6)A, 250Vac

Aux1 : relay SPST 8(3)A, 250Vac

Aux2 : relay SPST 16(6)A, 250Vac

Serial output: RS232 serial output for XB05PR printer connection

Serial output: RS485 serial output for monitoring system (MODBUS-RTU) protocol

Purpose of control: operating control

Construction of control: incorporated control, intended to be used in Class I or Class II equipment.

ERC

19. STANDARD VALUE OF THE CYCLES.

Cy1: for fast chilling and conservation of foods at positive temperature

CyS = tEP	iS2 = 5°C (41°F)	Pd3 = OFF
dbC = no	rS2 = -2°C (28°F)	dbH = yes
iS1 = 20°C (68°F)	Pd2 = 2.0 h	HdS = 3°C (37°F)
rS1 = -10°C (14°F)	iS3 = 3°C (37°F)	
Pd1 = 2.0 h	rS3 = -2°C (28°F)	

Cy2: for chilling and fast freezing of foods with holding

CyS = tEP	iS2 = 5°C (41°F)	Pd3 = 2.0 h
dbC = no	rS2 = -2°C (28°F)	dbH = YES
iS1 = 10°C (50°F)	Pd2 = 2.0 h	HdS = -18°C (0°F)
rS1 = -10°C (14°F)	iS3 = -18°C (0°F)	
Pd1 = 2.0 h	rS3 = -30°C (-22°F)	

Cy3: direct fast freezing with holding

CyS = tEP	iS2 = -18°C (0°F)	Pd3 = OFF
dbC = no	rS2 = -30°C (-22°F)	dbH = yes
iS1 = -18°C (0°F)	Pd2 = OFF	HdS = -18°C (0°F)
rS1 = -30°C (-22°F)	iS3 = -18°C (0°F)	
Pd1 = 4.0	rS3 = -30°C (-22°F)	

Cy4: direct fast freezing without holding

CyS = tEP	iS2 = -18°C (0°F)	Pd3 = OFF
dbC = no	rS2 = -30°C (-22°F)	dbH = no
iS1 = -18°C (0°F)	Pd2 = OFF	HdS = OFF
rS1 = -30°C (-22°F)	iS3 = -18°C (0°F)	
Pd1 = 4.0	rS3 = -30°C (-22°F)	

20. STANDARD VALUES OF THE PARAMETERS.

Lab	Description	Values	Level
Set	Set point	3.0	- - -
Hy	differential	2.0	Pr1
AC	Anti-short cycle delay	1	Pr2
PAU	Time of stand by	0	Pr2
PFt	Maximum acceptable duration of power failure	15	Pr2
Con	Compressor ON time with faulty probe	15	Pr2
COF	Compressor OFF time with faulty probe	10	Pr2
rPO	Thermostat probe calibration	0.0	Pr2
EPP	Evaporator probe presence	YES	Pr2
EPO	Evaporator probe calibration	0.0	Pr2
i1P	Insert probe 1 presence	YES	Pr2
i1o	Insert probe 1 calibration	0.0	Pr2
i2P	Insert probe 2 presence	n	Pr2
i2o	Insert probe 2 calibration	0	Pr2
i3P	Insert probe 3 presence	n	Pr2
i3o	Insert probe 3 calibration	0	Pr2
rEM	Probe selection to stop chilling cycle	iPt	Pr2
CF	Temperature measurement unit	°C	Pr2
rES	Resolution (for °C):	dE	Pr2
Lod	Local display	rP	Pr2
rEd	Remote display	rP	Pr2
d1P	Door switch polarity	cL	Pr2
Odc	Open door control	F-C	Pr2

Lab	Description	Values	Level
dOA	Open door alarm delay	5	Pr2
dLc	Stop count down of running cycle	y	Pr2
rrd	Regulation restart after door open alarm	Y	Pr2
d2F	Second digital input function	EAL	Pr2
d2P	Second digital input polarity	cL	Pr2
did	Time delay for digital input alarm	5	Pr2
oA1	First configurable relay function	tMr	Pr2
oA2	Second configurable relay function	ALL	Pr2
oA3	Third configurable relay function	Lig	Pr2
2CH	Compressor setting during the holding	C1	Pr2
OAt	Second compressor switching on delay	3	Pr2
OAS	Set point for second compressor	0	Pr2
OAH	Differential for second compressor	2.0	Pr2
OAI	Probe selection for second compressor	rP	Pr2
OSt	Auxiliary output timer	0	Pr2
OSS	Set point for auxiliary output	0	Pr2
OSH	Differential for auxiliary output	2.0	Pr2
OSi	Probe selection for auxiliary output	rP	Pr2
tdF	Defrost type	rE	Pr2
idF	Interval between defrost cycles	6.0	Pr2
dtE	Defrost termination temperature	8	Pr2
MdF	Maximum length for defrost	20	Pr2
dFd	Temperature displayed during defrost	rt	Pr2
Fdt	Drip time	0	Pr2
dAd	Defrost display time out	20	Pr2
FnC	Fan operating mode	c n	Pr2
FSt	Fan stop temperature	30	Pr2
AFH	Differential for the stop temperature and for the alarm	2.0	Pr2
Fnd	Fan delay after defrost	2	Pr2
ALU	MAXIMUM temperature alarm	30	Pr2
ALL	Minimum temperature alarm	30	Pr2
ALd	Temperature alarm delay	15	Pr2
EdA	Alarm delay after defrost	30	Pr2
tbA	Silencing alarm relay	YES	Pr2
tCy	Duration of last cycle	- - -	Pr1
tP1	Duration of first phase of the last cycle	- - -	Pr1
tP2	Duration of second phase of the last cycle	- - -	Pr1
tP3	Duration of third phase of the last cycle	- - -	Pr1
Adr	Address for RS485:	1	Pr2
bUt	Buzzer activation at the end of the cycle	30	Pr2
tPb	Type of probe	ntc	Pr2
rEL	Release code (readable only)	2.0	Pr2
Ptb	Parameter code (readable only)		Pr2

DIXELL™



Dixell S.r.l. - Z.I. Via dell'Industria, 27 - 32016 Alpago (BL) ITALY
 Tel. +39.0437.9833 r.a. - Fax +39.0437.989313 - EmersonClimate.com/Dixell - dixell@emerson.com